


- 50
- 52
- 51
- 51
- 53
- 54
- 55
- 56
- 3
- 57
- 58

x2
x4

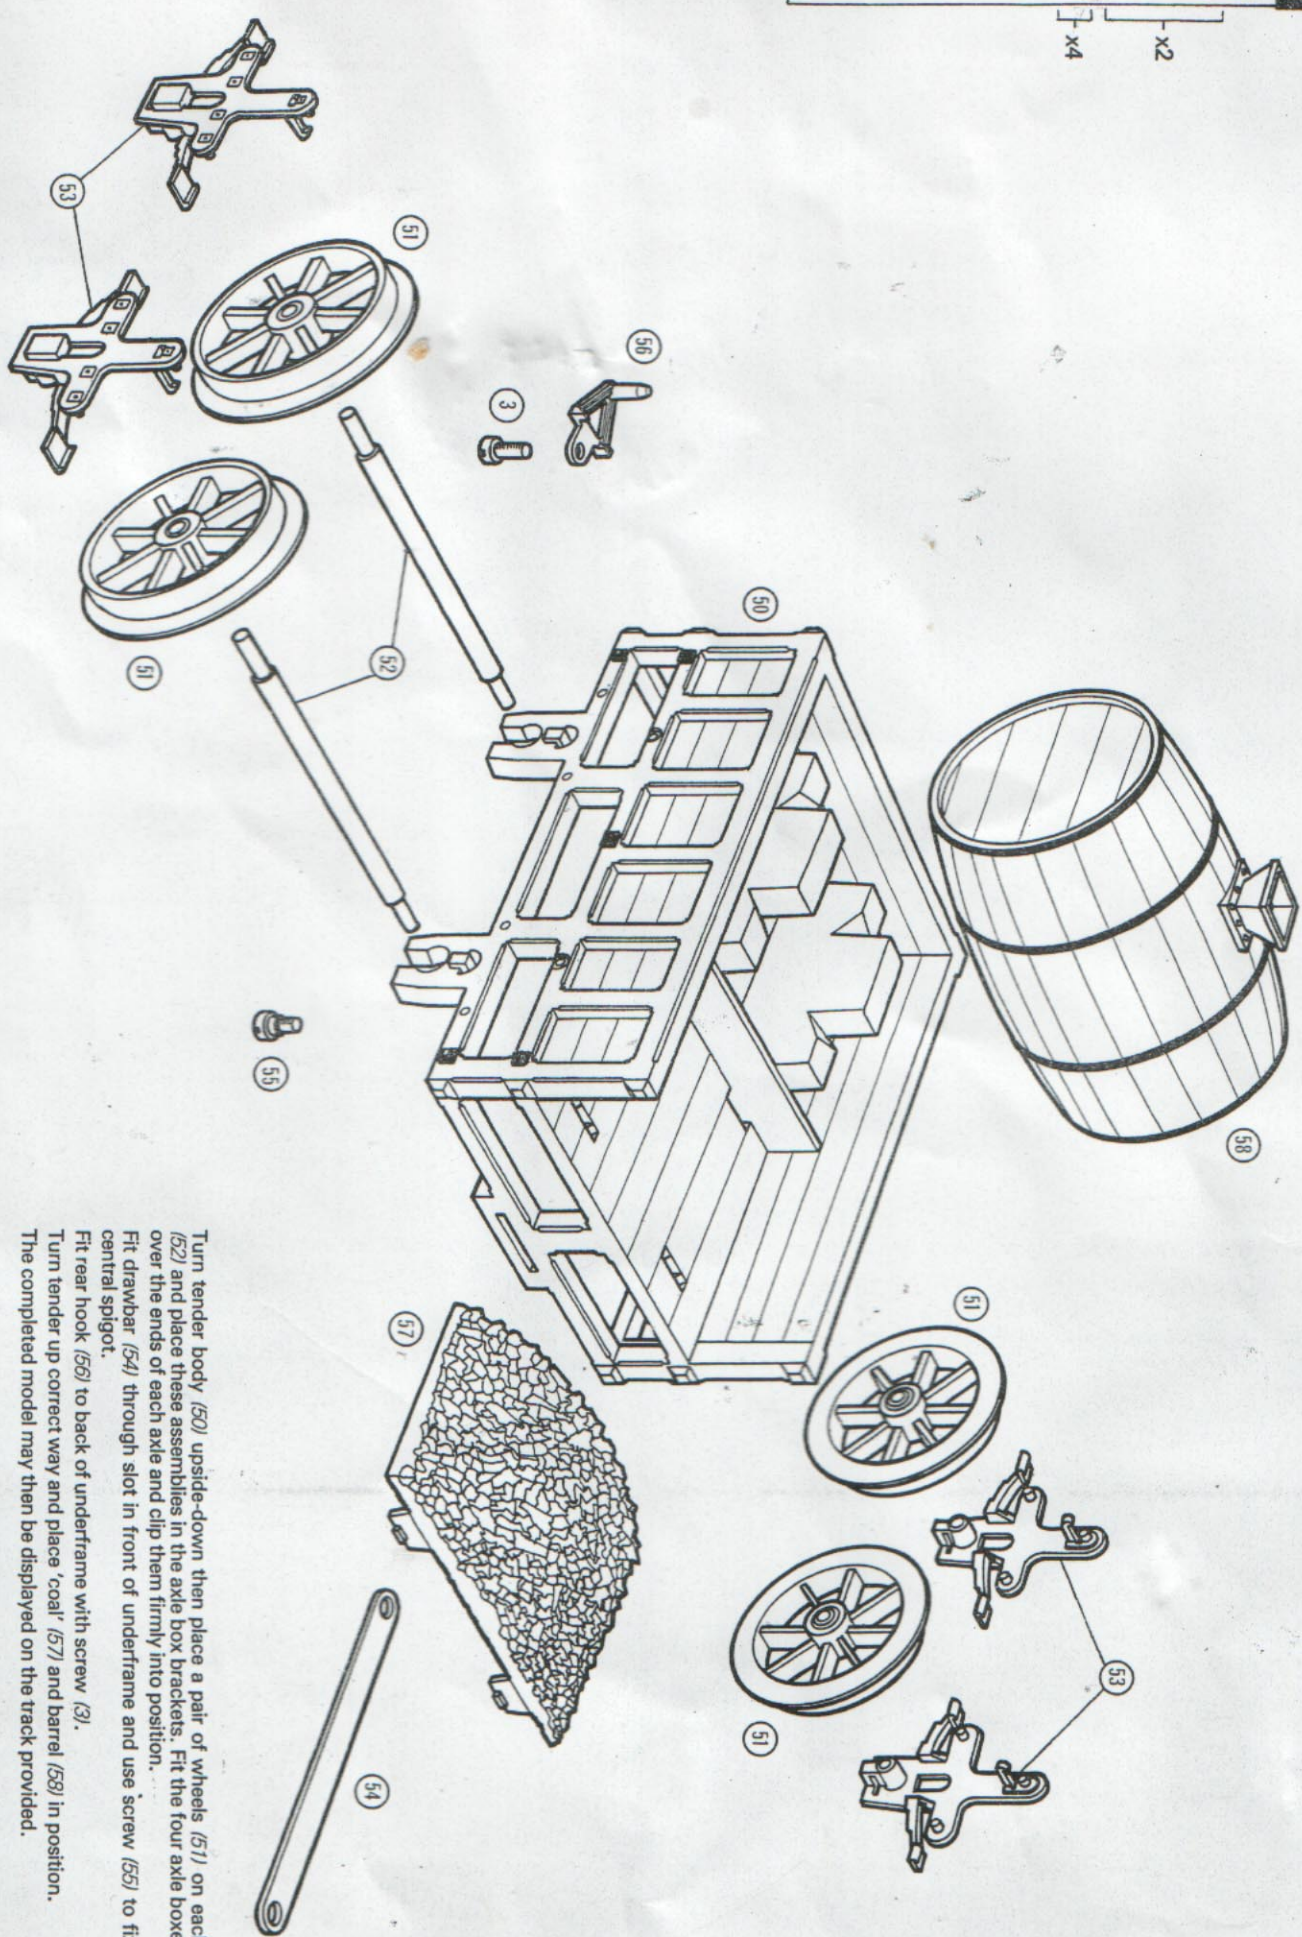

Turn tender body (50) upside-down then place a pair of wheels (51) on each axle (52) and place these assemblies in the axle box brackets. Fit the four axle boxes (53) over the ends of each axle and clip them firmly into position.
 Fit drawer (54) through slot in front of underframe and use screw (55) to fix it to central spigot.
 Fit rear hook (56) to back of underframe with screw (3).
 Turn tender up correct way and place 'coal' (57) and barrel (58) in position.
 The completed model may then be displayed on the track provided.

Enquiries regarding spares and service should be addressed to:
Hornby Service Centre, Westwood, Margate, Kent, CT9 4HZ, England.

4/307 1081

Made in Great Britain by

HORNBY HOBBIES

A3 - Printed in England